

Bootloader

RoboCORE comes with our bootloader already on flash. If you haven't overwritten the bootloader there should be no need to follow this guide.

In order to flash bootloader you need to perform the following steps:

1. Download the [RoboCORE SDK](#) and unpack it.
2. Open terminal.
3. Go to tools/linux or tools/windows folder (depending on your operating system).
4. Install drivers following the article [drivers installation](#)
5. Connect RoboCORE via microUSB port to your PC.
6. Run the following command:

On **Linux**

```
./robocore-flasher --flash-bootloader
```

On **Windows**

```
robocore-flasher.exe --flash-bootloader
```