

# SSH

This guide will show how to ssh to Intel Edison.

## For Android users

1. Connect Android to RoboCORE (UE port).
2. Wait for RoboCORE application to start (Edison config screen should be displayed).
3. Open settings menu and press *Enable inner SSH*.
4. Then you have host, port and credentials that allows you to connect to Intel Edison over SSH.

Once you have connected you can add your public key to login without the above procedure.