

# How to start?

## Online development (via RoboCORE Platform)

This is the easiest way to use RoboCORE. You only need to connect RoboCORE with RoboCORE Platform. There are 3 types of devices which can provide the Internet connection between RoboCORE and the RoboCORE Platform.

### Connecting RoboCORE to the Internet

Choose the one which device are you going to use with RoboCORE:



(you will be redirected to the more detailed instruction for each method).

### Connecting RoboCORE to the cloud platform

[Connecting RoboCORE to the cloud platform](#)

## Offline development

All instructions how to develop RoboCORE locally are available [here](#).